




RCX211B / RCX211C

SUPER SLIP-ONS®, BLACK / CHROME

**H-D : 516CM#89 79
10-1 DFLSTFB, 07-UP FLSTF, 07 FXSTD**

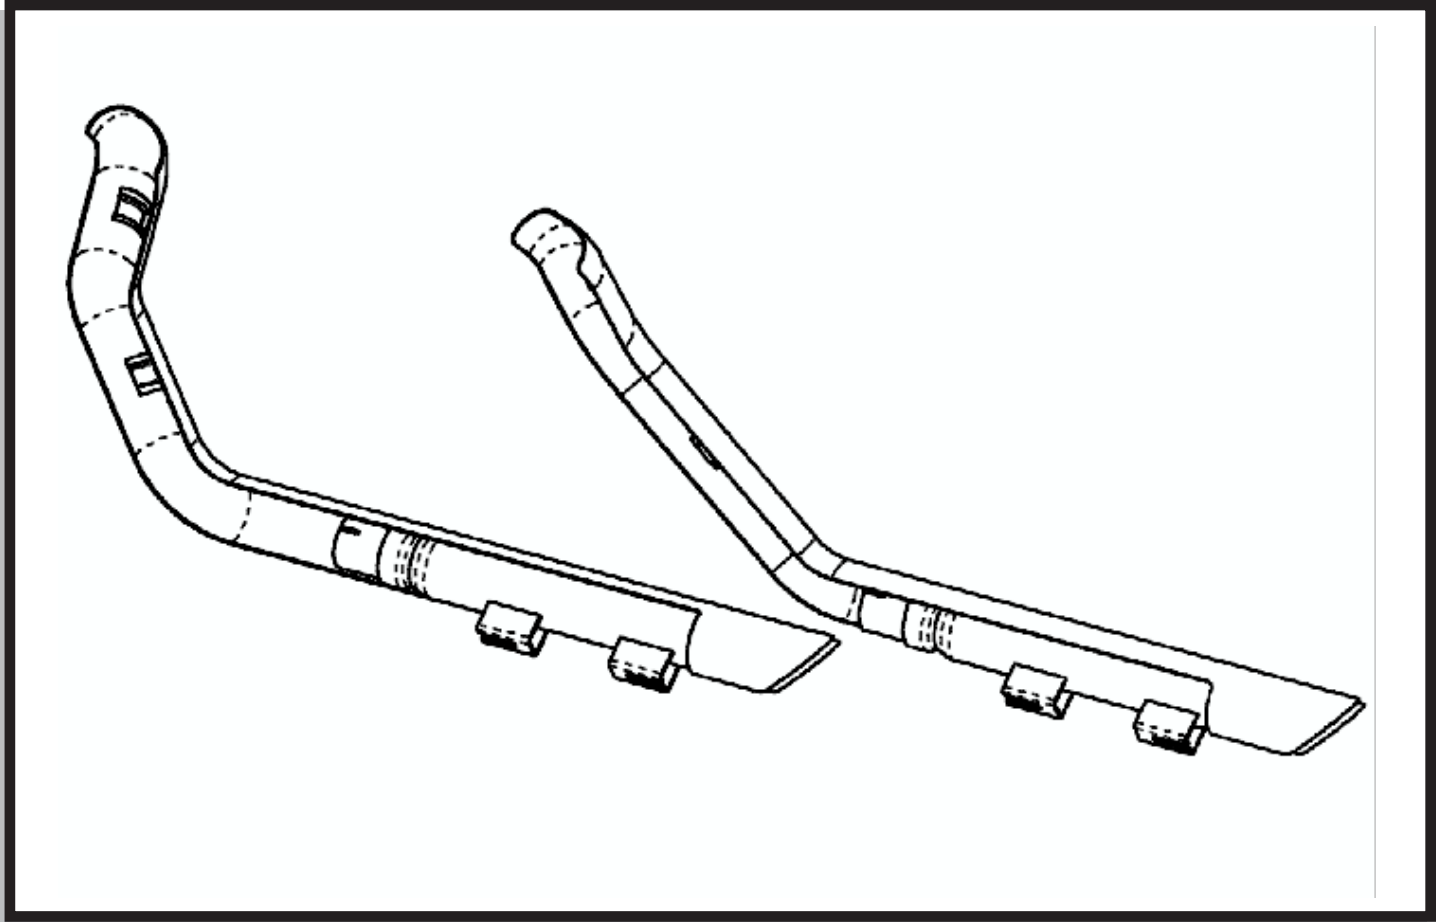

PARTS INCLUDED

Ref.	Description	Qty
1)	Front Headpipe Heat Shield (Black or Chrome)	1
2)	Rear Headpipe Heat Shield (Black or Chrome)	1
3)	Crossover Heat Shield (Black or Chrome)	1
4)	Top Muffler Assembly (Chrome)	1
5)	Bottom Muffler Assembly (Chrome)	1
6)	Threaded Muffler Bracket	4
7)	Hose Clamp, #32	2
8)	Hose Clamp, #28	5
9)	1/4-20x3/4" Hex Head Bolt	4
10)	1/4" Flat Washer	4
11)	1/4" Lock Washer	4

08-50-47410 REV. A



373 Mitch McConnell Way • Bowling Green, Kentucky 42101 • 1-800-360-0915
 fax: 270-842-9527 • email: rcc@rccomponents.com
www.rccomponents.com

RCX211B / RCX211C

SUPER SLIP-ONS®, BLACK / CHROME

**H-D FATBOY/DEUCE
10-UP FLSTFB, 07-UP FLSTF, 07 FXSTD**

NOTE

RCX exhaust systems may not meet EPA and/or carb emissions in the State of California or other States with similar emission control restrictions. End user of product shall determine acceptable use in compliance with local and federal laws. User of product assumes all risk and financial obligations in violation of such regulations as a result of vehicle inspections or emission tests.

INSTALLATION INSTRUCTIONS

- 1) Make sure the motorcycle is cool and place securely on a service lift or center stand.
- 2) Loosen completely the clamps securing the stock heat shields to the front and rear headpipes. Remove the heat shields from the headpipes.
- 3) Loosen the clamps securing the stock mufflers to the head pipes. Remove the bolts/nuts (2 per muffler) securing the mufflers to the muffler mounting bracket.
- 4) Slide the stock mufflers off of the stock headpipes. Remove the stock muffler clamps from the mufflers, and set aside for use with the RCX Super Slip-ons.
- 5) Feed one #28 hose clamp through the bracket on the new crossover heat shield. Loosely mount the heat shield to the crossover tube on the stock headpipes. Do not fully tighten at this time. (Fig. 1)
- 6) Feed two #28 hose clamps into the brackets on the new front heat shield that will be positioned over the headpipe area. Feed one #32 hose clamp into the bracket that will be positioned over the new muffler.
- 7) Loosely place one original muffler clamp onto the notched inlet of the supplied bottom muffler. Place the muffler inside the front heat shield. (Fig. 2)
- 8) With the muffler and heat shield together, slide the muffler onto the front headpipe outlet. While fully seating the muffler onto the headpipe, rotate the heat shield into place over the headpipe.
- 9) Using one supplied threaded muffler bracket, and two 1/4-20x3/4" hex head bolts, 1/4" flat washers, and 1/4" lock washers, loosely secure the muffler to the muffler mounting bracket on the motorcycle.
NOTE: *The threaded muffler bracket will be placed inside the bracket welded to the muffler.*
- 10) Position the muffler and heat shield, then fully tighten the muffler mounting bolts/nuts. Fully tighten the muffler clamp. Fully tighten all hose clamps, including the crossover.



373 Mitch McConnell Way • Bowling Green, Kentucky 42101 • 1-800-360-0915
fax: 270-842-9527 • email: rcc@rccomponents.com

www.rccomponents.com


RCX211B / RCX211C

SUPER SLIP-ONS®, BLACK / CHROME

H-D FATBOY / DEUCE
10-UP FLSTFB, 07-UP FLSTF, 07 FXSTD

INSTALLATION INSTRUCTIONS

- 11) Loosely place one original muffler clamp onto the notched inlet of the supplied top muffler.
- 10) Using the remaining supplied threaded muffler bracket, two 1/4-20x3/4" hex head bolts, 1/4" flat washers, and 1/4" lock washers, loosely secure the muffler to the muffler mounting bracket on the motorcycle. (Fig. 3)
NOTE: *The threaded muffler bracket will be placed inside the bracket welded to the muffler.*
- 11) Feed the remaining two #28 hose clamps into the brackets on the new rear heat shield that will be positioned over the headpipe area. Feed one #32 hose clamp into the bracket that will be positioned over the new top muffler. Slide the heat shield over the muffler and rotate onto the headpipe.
- 12) Position the muffler and heat shield, then fully tighten the muffler mounting bolts/nuts. Fully tighten the muffler clamp. Fully tighten all hose clamps.
- 13) Clean all fingerprints and grease from the exhaust system prior to starting the motorcycle.

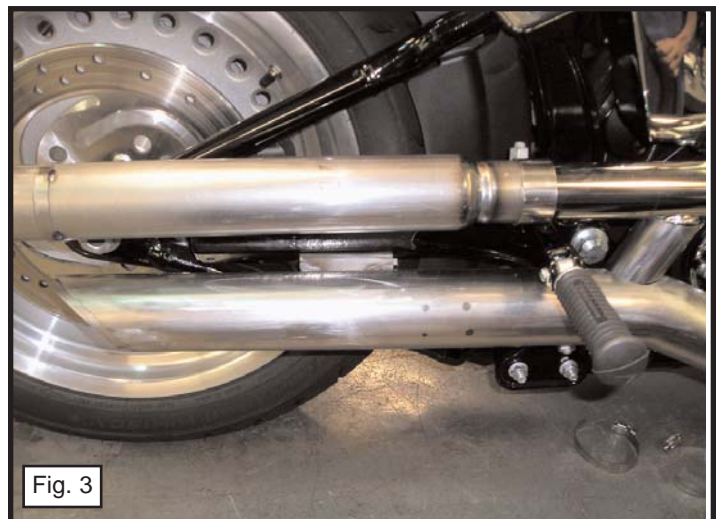

373 Mitch McConnell Way • Bowling Green, Kentucky 42101 • 1-800-360-0915
fax: 270-842-9527 • email: rcc@rccomponents.com

www.rccomponents.com